

# Heavy Duty Back Rack Installation Guide


Please read all installation guide before using this product.



**WHAT YOU WILL NEED**

13mm Wrench 


## COMPONENTS



**M8 t-shape screw x8**

**M8 flat washer x8**

**M6 nut x8**



**M8 screw x44**

**M8 flat washer x88**

**Nut x44**

**S=5 hex wrench x1**



Horizontal bar (front) x2



Horizontal bar (rear) x1



Connector bracket x2




Support bracket x4




Frame side panel x2

1


\*At every step, loosely tighten the screws until the final step, this allows for possible adjustment where needed.\*

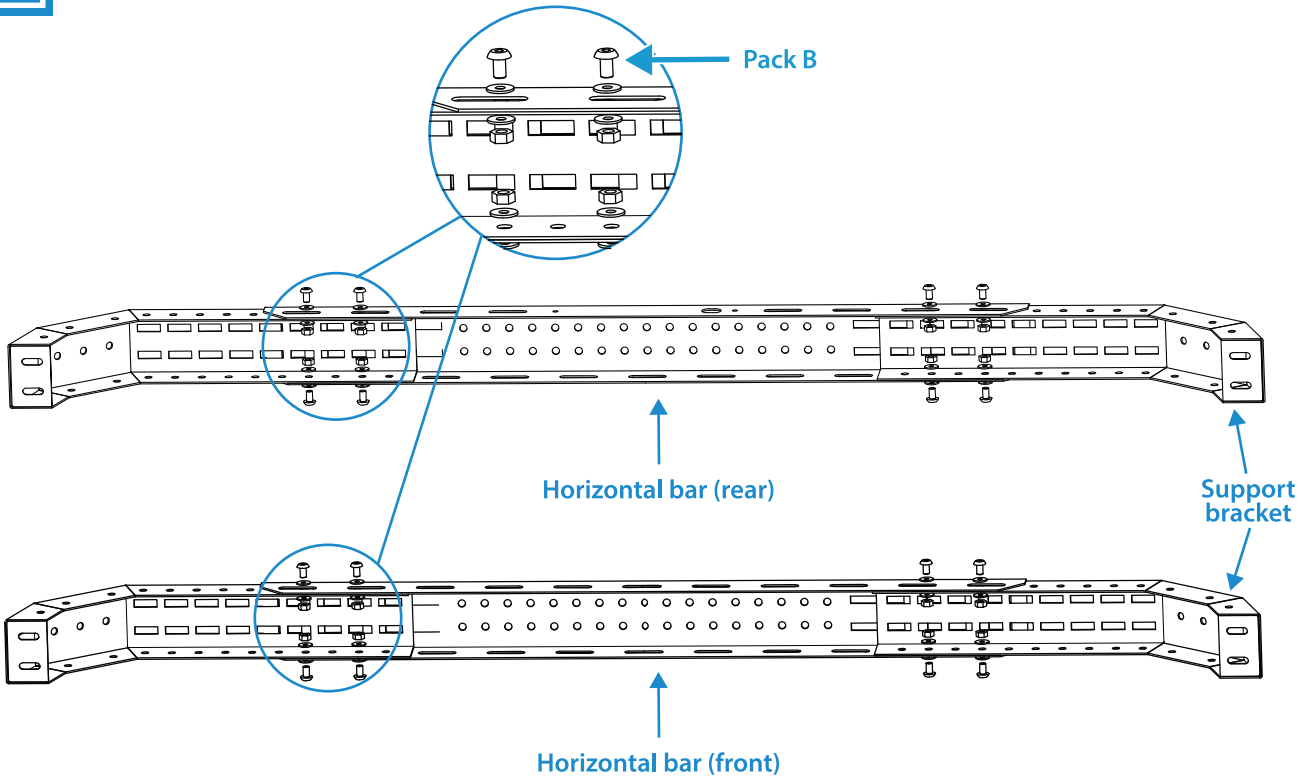


2

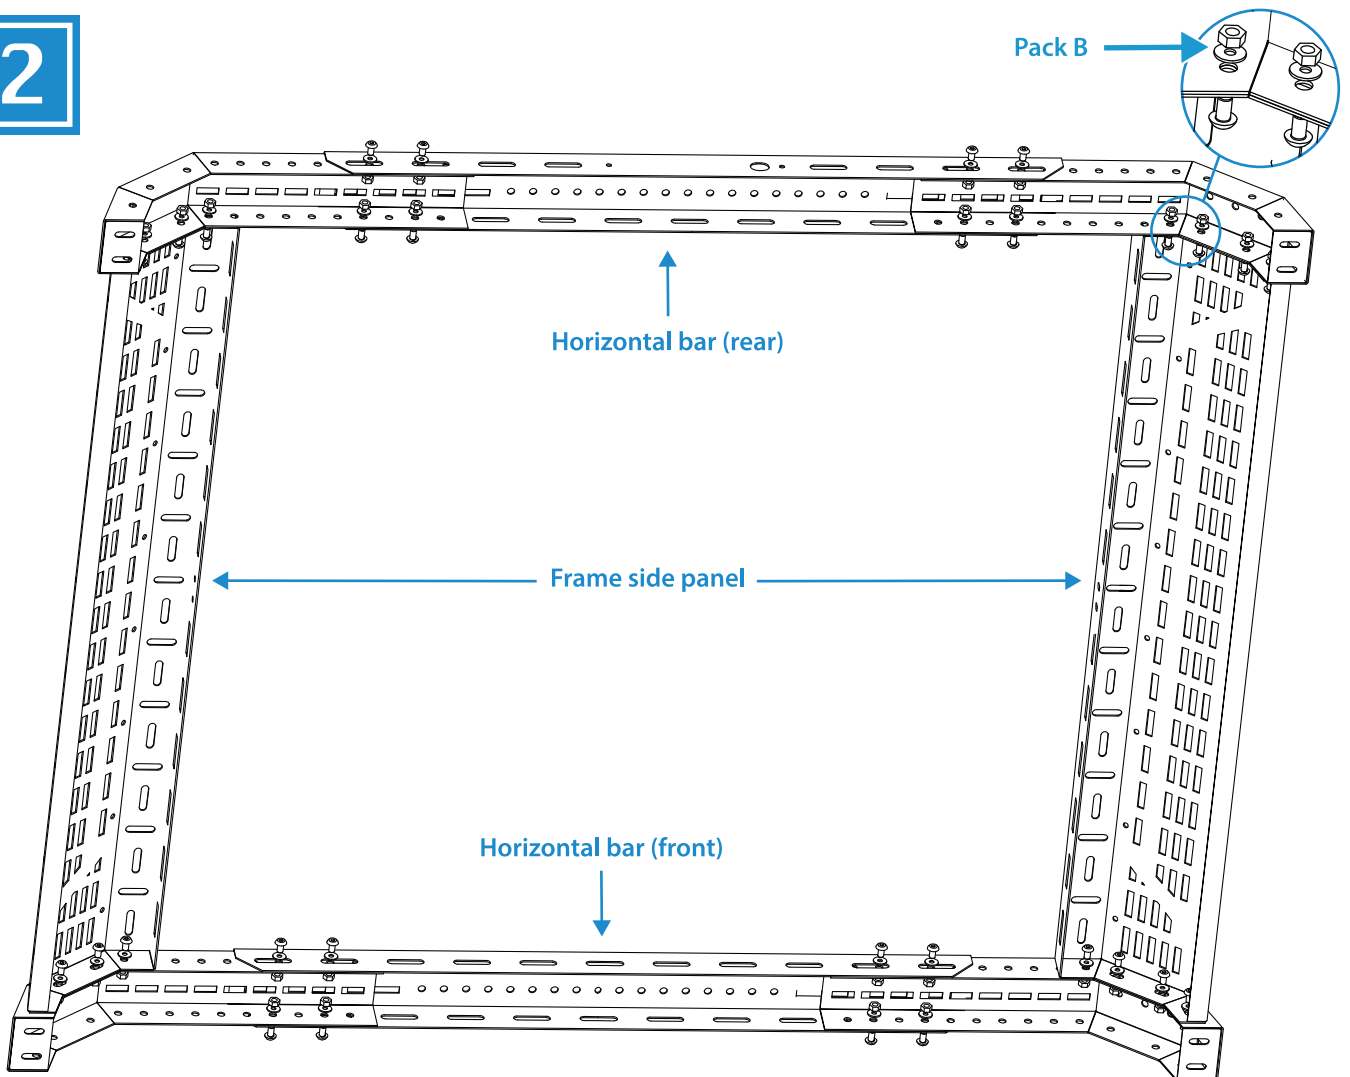


3

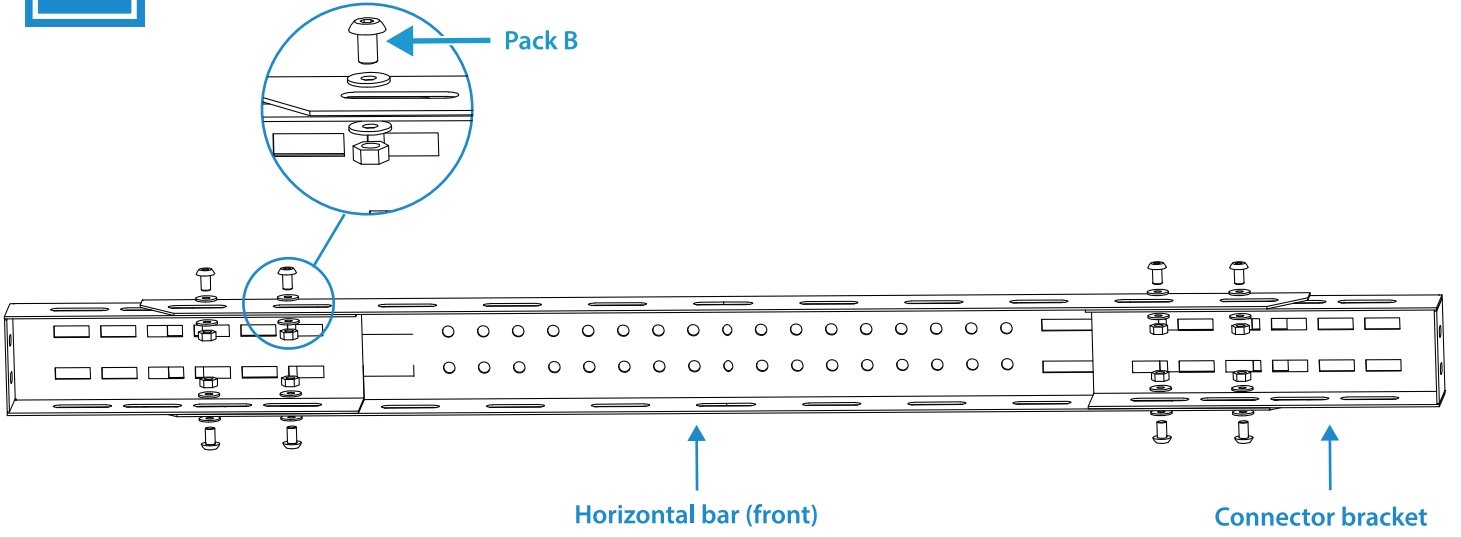

4

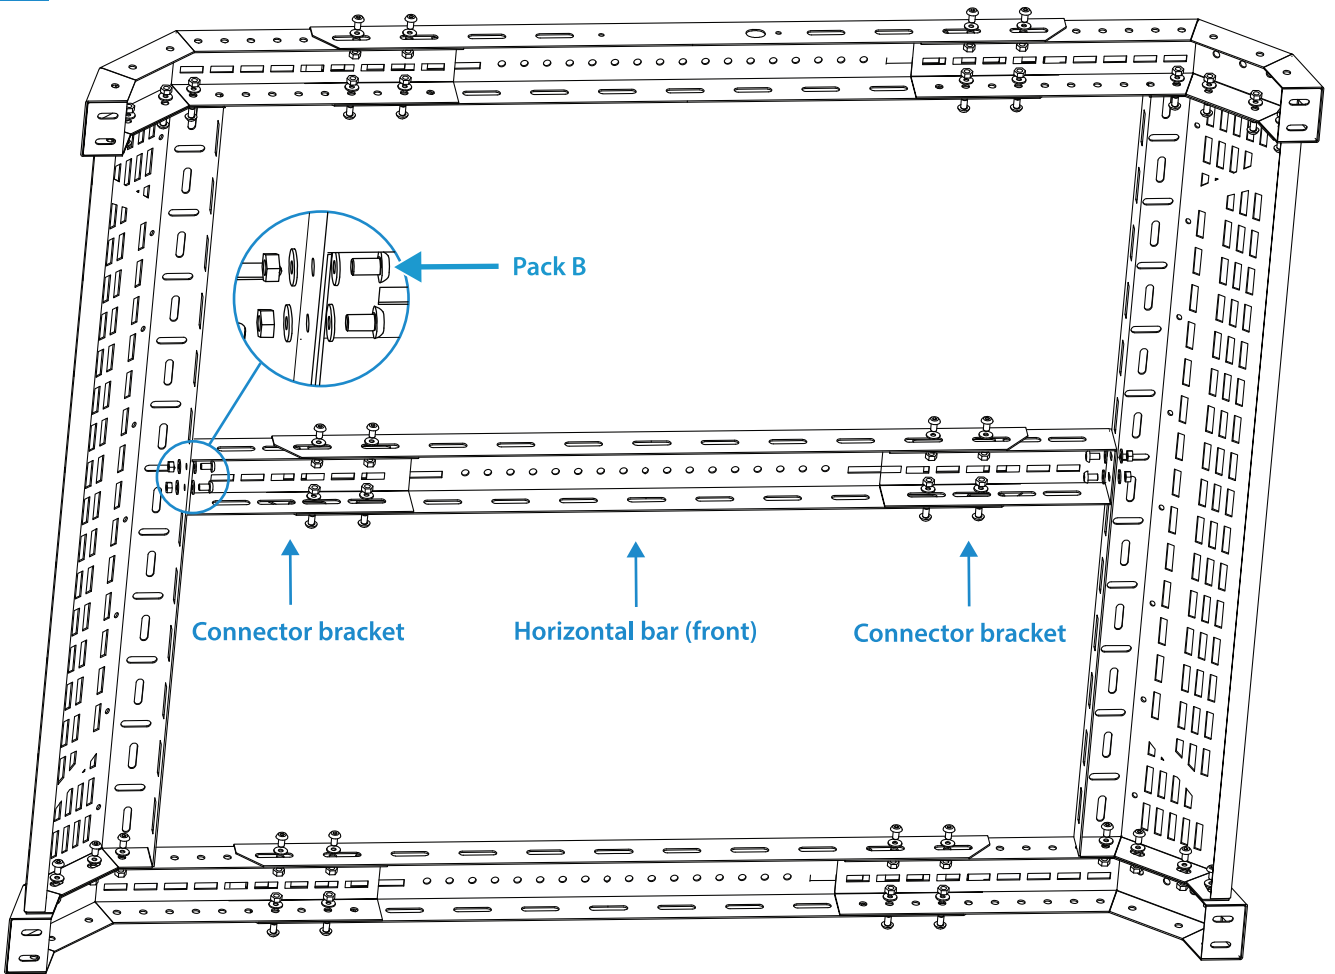

5

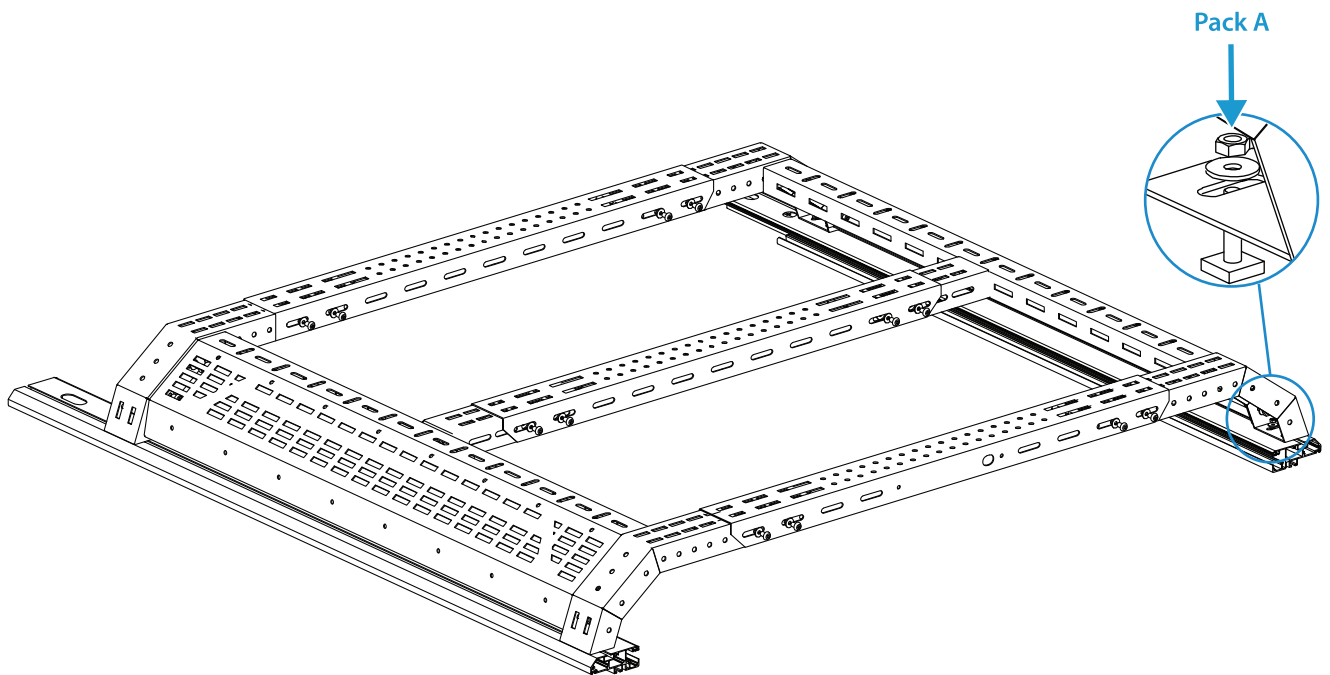

626-360-5034  
626-463-8750

✉ [ebay@syneticusa.com](mailto:ebay@syneticusa.com)  
[jcwinauto@gmail.com](mailto:jcwinauto@gmail.com)

🌐 <http://syneticusa.com/>  
<https://jcwinauto.com/>