

1

54 3/4"


41 5/8"

26 3/8"

Measure from bulkhead

Locate the three mounting points on each side of the truck bed liner.

2

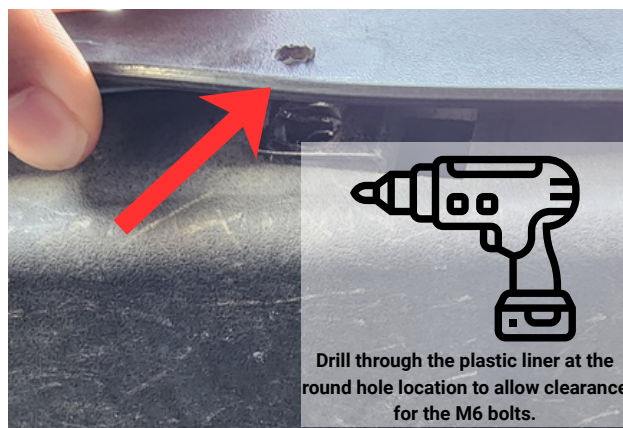

Using a removal tool or flat screwdriver, carefully lift the bed liner to access the pre-cut mounting locations. You should see a rectangular opening with a round hole next to it at each mounting point. Insert the clip.

3



Install all mounting brackets using M6 bolts, washers, and nuts. Three brackets per side. Ensure all brackets are secure and properly aligned.