




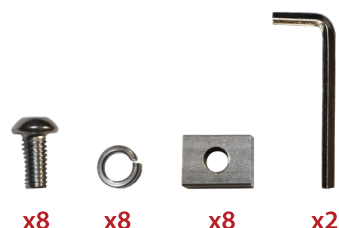

# Luggage Rack Installation Guide

Please read all installation guide before using this product.

## COMPONENTS



Hold bar  
support x4



Endcap x4



Leg base x4



Corner piece x4



Foam pad x8



Hold bar x2



Horizontal  
bar x2



Vertical  
bar x6




Vertical frame bar x2  
(4 holes)




Horizontal frame bar x2  
(12 holes)

## 1 COMPLETE THE OUTER FRAME

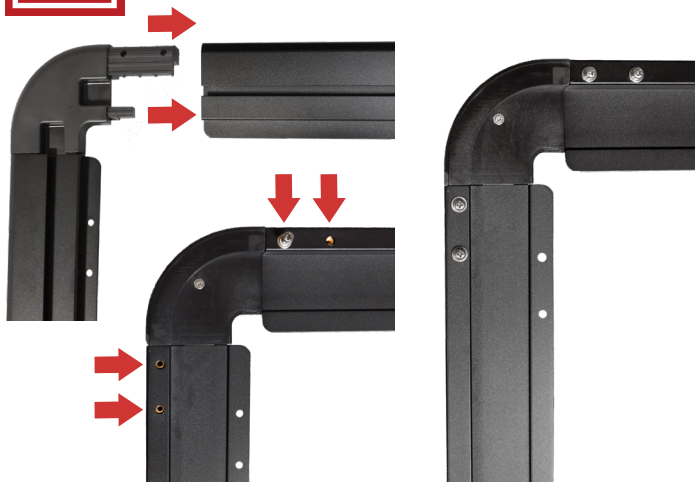

Assemble everything on a leveled surface, preferably on the ground. Insert the corner posts into frame bars, keep in mind the frame bars across from each other should be the same kind. Insert screws into the bottom of the corner posts (**pack2. screw + 2 washer**), 4 locations per corner.

## 3 ATTACH HOLD BARS TO THE FRAME

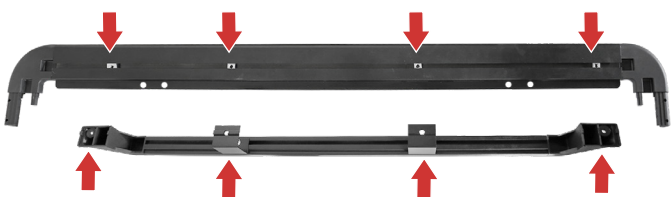


Slide nuts (**pack3**) 4 pieces into each of the 2 vertical frame bars, then attach the hold bar and bar support to the frame using wrench with screws (**pack3. screw + washer**). The support is held by the screw and washer only on one end, the other end simply touches the hold bar.

**\*\*Note:** Screw of the hold bar should face inward so that it is invisible from the side of the vehicle.





## 2 PREPARE THE TWO HOLD BARS

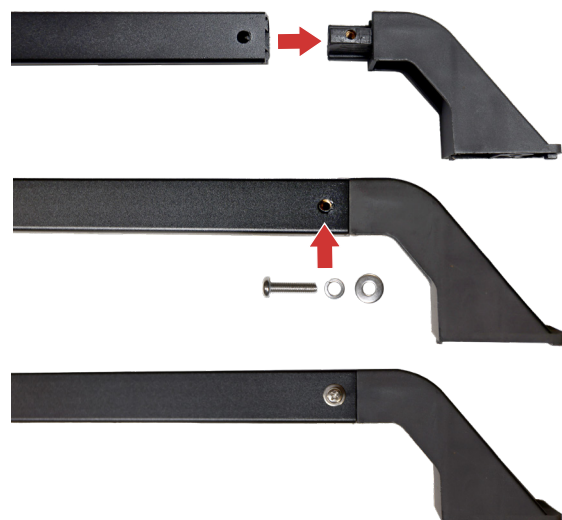

Insert the endcaps to the hold bar, two endcaps per bar. Insert screws into the side of the endcaps (**pack 2. screw + 2 kinds of washers**), 1 location per endcap.



## 4 COMPLETE THE FRAME NET PART 1

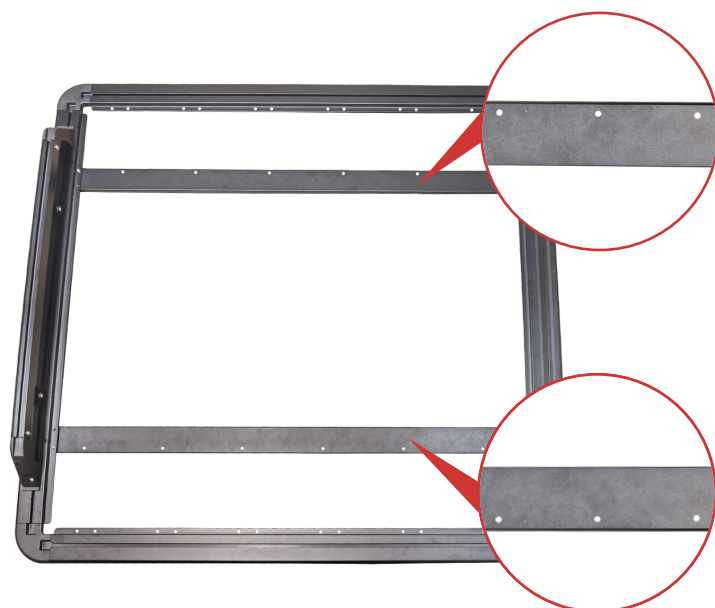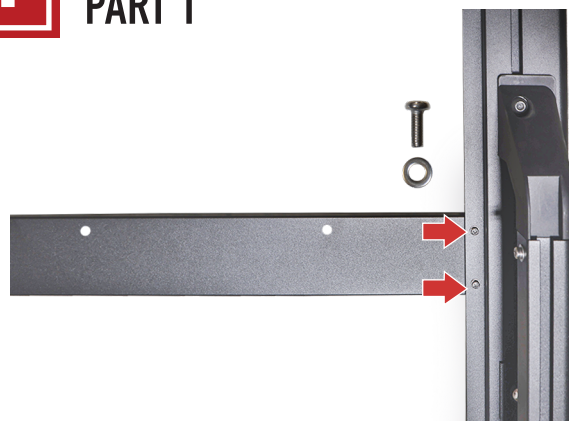

Attach the 2 horizontal bars to the frame first, holes in the middle should be facing outward. Use the shorter screw and the flat washer on each of the 8 locations (**pack 1**) on the frame. Flip the frame over.

5


## COMPLETE THE FRAME NET PART 2

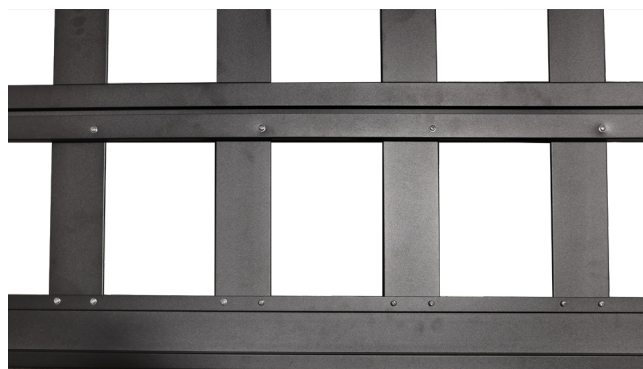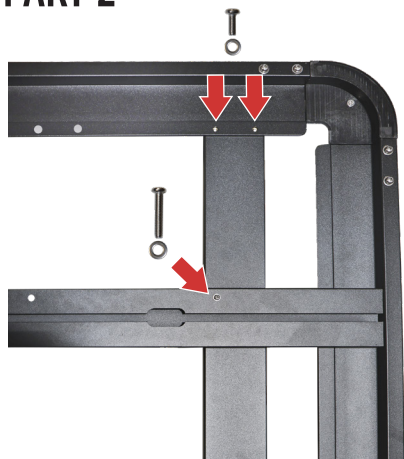

Attach the 6 vertical bars to the frame and the horizontal bar, same as before use the shorter screw and the flat washer (**pack1**) for the 24 locations on the frame, but use the longer screw with the flat washer for the 12 locations in the middle, none of the spring washer is needed.

6

## ADD THE LEG BASE TO THE FRAME

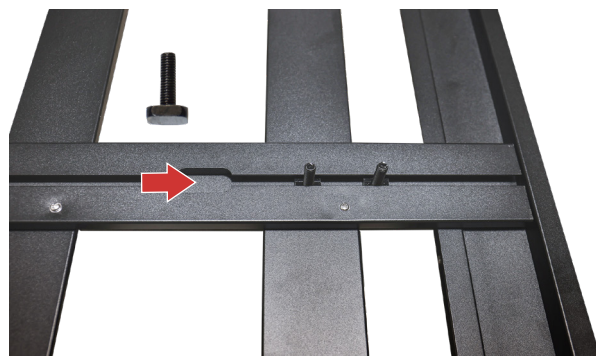

Slide the t-bolt (**pack4**) 4 pieces into each of the horizontal bars, then set the leg base on them and tighten each bolt (**pack4, nut + 2 kinds of washers**). The base end that touches the ground has foam pads you can apply, find a match from the available pads provided.

7

## LOAD ONTO THE TONNEAU COVER



Slide the t-bolt (**pack4**) 4 pieces into each of the rails of the tonneau cover. Match the bolts to the openings on the leg base of the luggage rack, then tighten each bolt (**pack4, nut + 2 kinds of washers**).

DONE!





## FINISHED LOOKS

**BOTTOM VIEW**



**TOP VIEW**



**JCWIN AUTO**

 626-360-5034

 [jcwinauto@gmail.com](mailto:jcwinauto@gmail.com)

 [www.jcwinauto.com](http://www.jcwinauto.com)