



SYNETICUSA®



www.synteticusa.com
www.jcwinauto.com




info@synteticusa.com
jcwinauto@gmail.com




415-651-7516
Mon-Fri 9am-5pm (PT)

Bedside Molle Panel Installation Guide


Please read all installation guide before using this product.

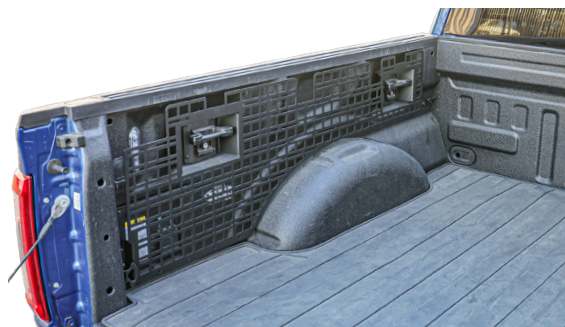


COMPONENTS

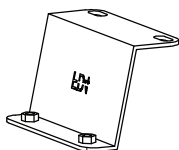

Bracket1 x4

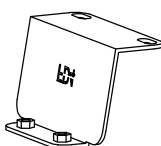


Bracket2 x4




Bracket3 x2



M6 Lock Washer x20




M6 Flat Head Hex
Socket Screw x16




M6 External
Hex Screw x4



M6 Flat washer x20

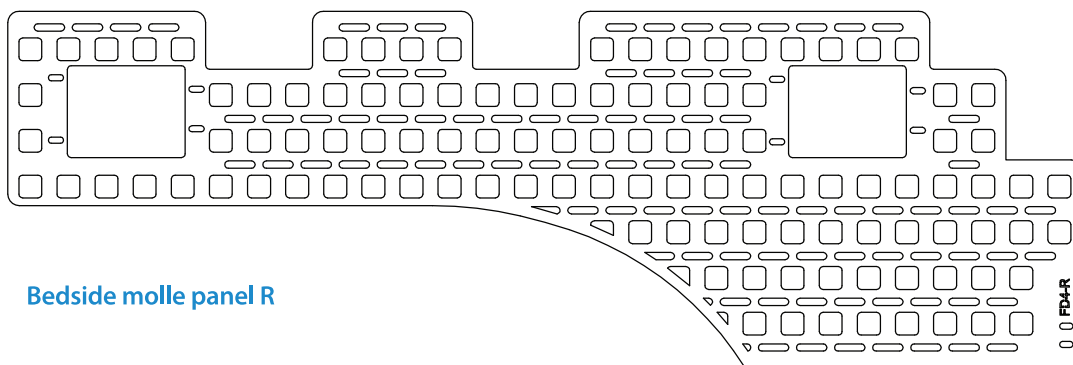


Bedside molle panel R

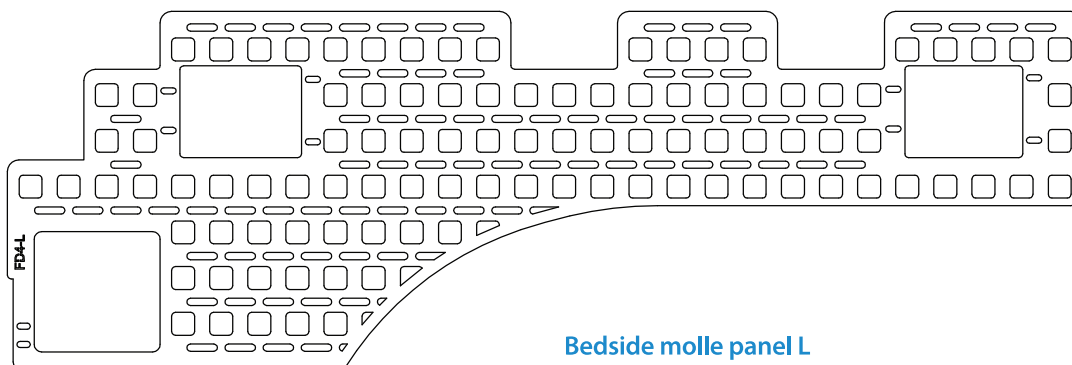

Bedside molle panel L


1

Bedside molle panel L

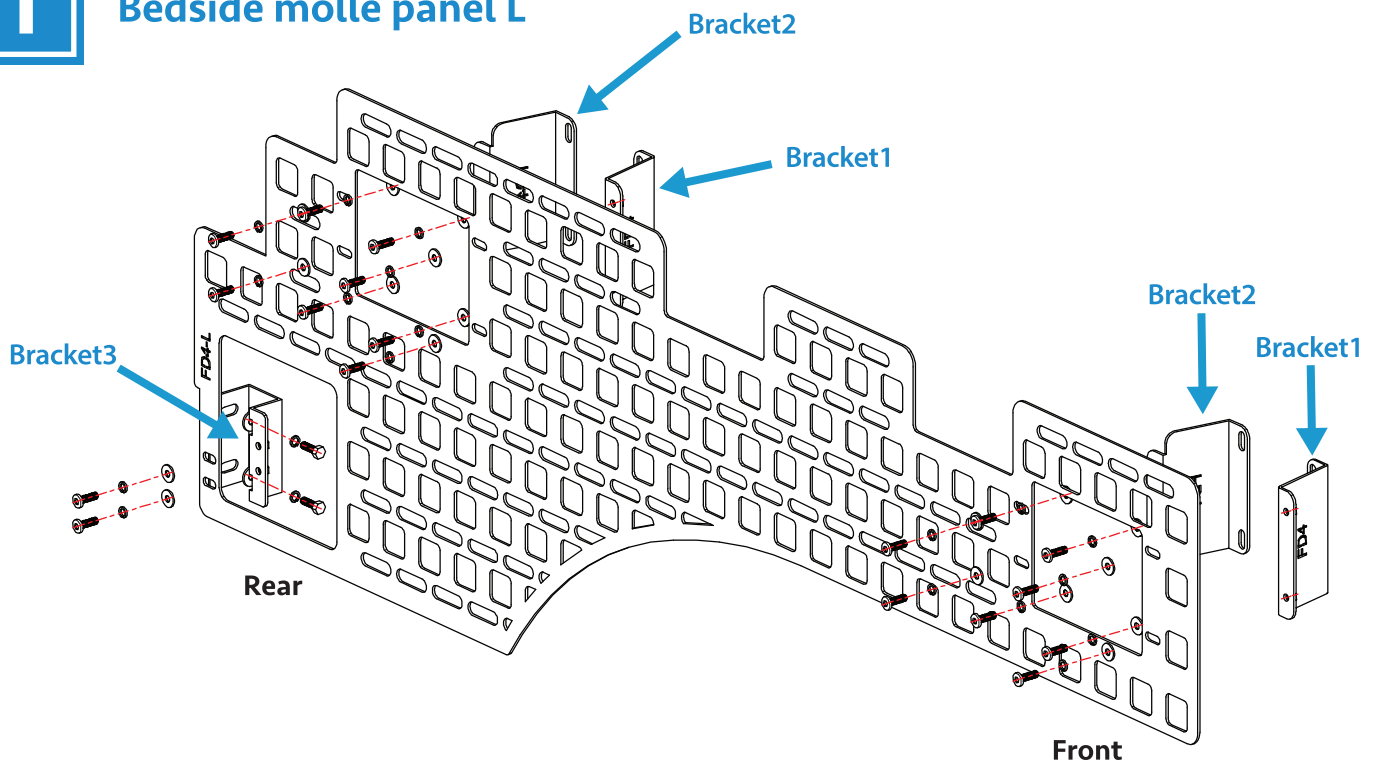

2

Bedside molle panel R

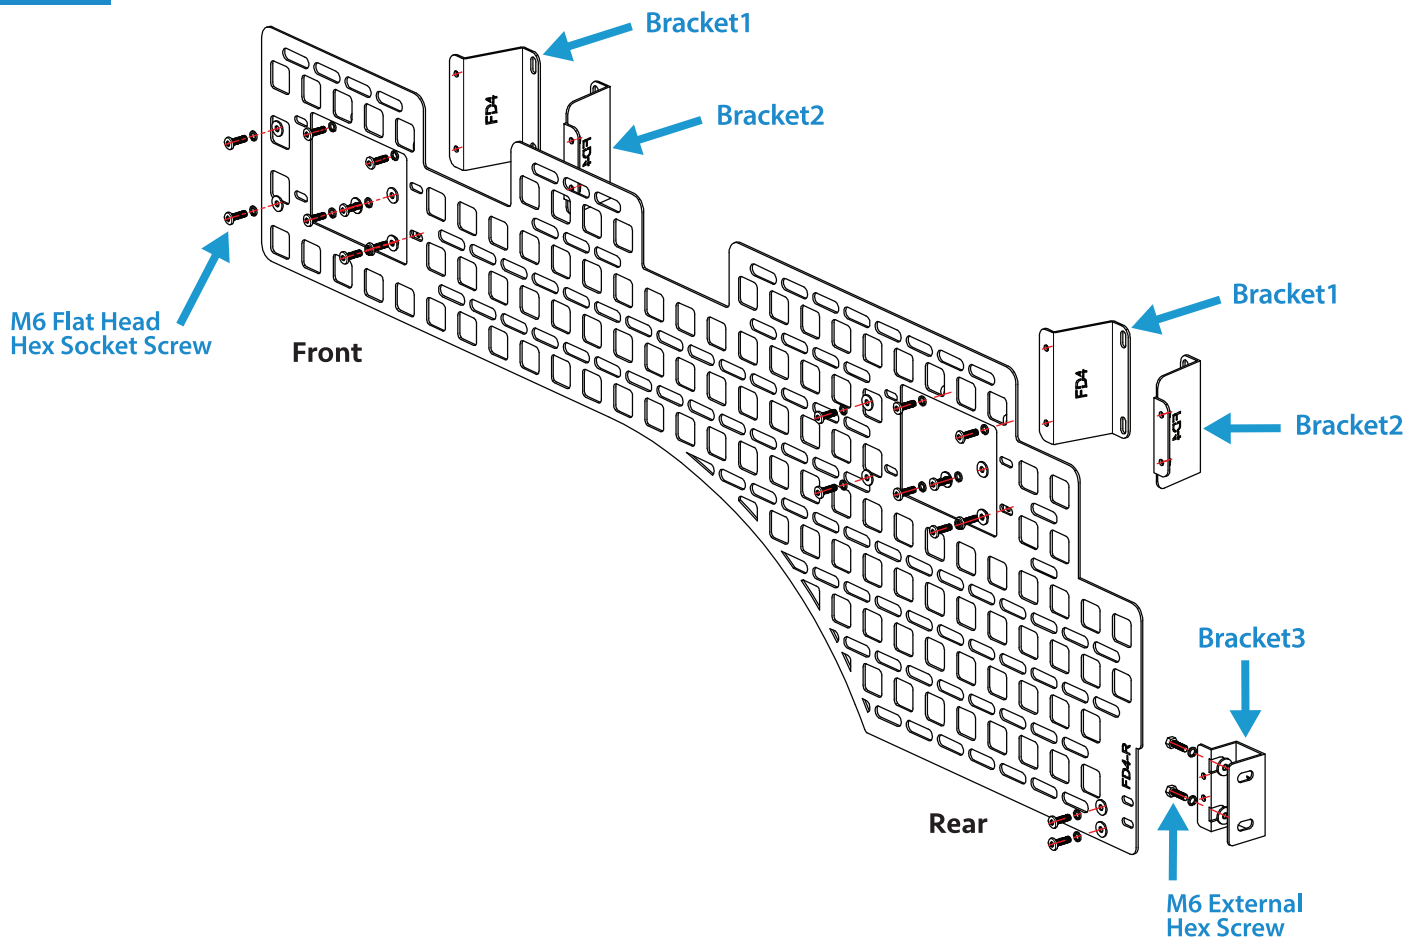

SYNETICUSA®



415-651-7516



info@syneticusa.com
jcwinauto@gmail.com



www.syneticusa.com
www.jcwinauto.com