



Truck Tent Installation Guide

Please read all installation guide before using this product.



✉ jcwinauto@gmail.com
☎ 562-821-5057
Mon-Fri 9am-5pm (PT)
📍 www.jcwinauto.com


Package includes



Poles



Flysheet

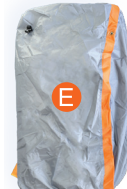

Tent




Pole bag



Main bag

1

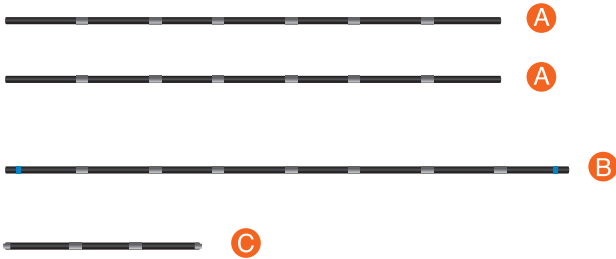

Assemble 3 poles one by one.
Note: Pole-B with blue tag is the longest.

2



Spread out the tent so the sleeves are completely visible; you should see a cross sleeve and a horizontal sleeve as shown.

3



Start with the cross sleeves, insert the two Pole-A completely, then the horizontal sleeve with Pole-B completely.



NO



YES

IMPORTANT MAKE 100% SURE the sleeves are not wrinkled while you are inserting the poles, or else poles may not go in all the way to reach the pouches!! Keep sleeve straight and smooth at all time.

4



Hold the tent up, insert the ends of the poles into the corresponding pouches and clip the body of the poles where applicable, as shown in the photo.

5

Complete look when both pole-A are pouched



Complete look when pole-A and pole-B pouched

6



Insert pole-C between pole-A and pole B; one end goes to the cross point of pole-A and the other end to the middle of pole-B, as shown.

IMPORTANT MAKE 100% SURE the sleeves are not wrinkled while you are inserting the poles, or else poles may not go in all the way to reach the pouches!!

7

Back angle

Front angle



Complete look when all poles are fixed in place.

8



Cover tent with the flysheet. **Quick tip**, match the location of the openings on the sheet with the tent windows then put on the flysheet for a quicker job. Clip the flysheet down.

9



Move the entire assembly onto the truck bed, tent door facing the tailgate. Use the straps on the bottom of the assembly to latch onto sides of the vehicle and the bottom of the tailgate.